



# 310 Ergo Comfort

## Steg 1


1.1

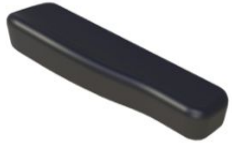

1.2

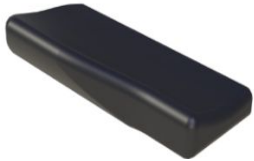

1.3

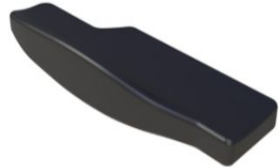


1.4




- 1.1 A dyna höger F80585  
A dyna vänster F80731  
1.2 C dyna höger F80395  
C dyna vänster F80234  
1.3 E dyna höger F80935  
E dyna vänster F80936  
1.4 G dyna (hö-vä) F81174

## Steg 2

2.1

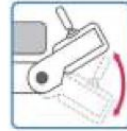

2.2

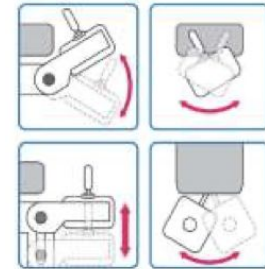



- 2.1 Enkel-led 310 F80647  
2.2 Multiled 310 F80815

## Steg 3



3. Special-led box F81829

## Steg 4

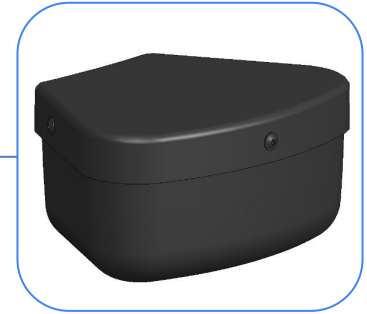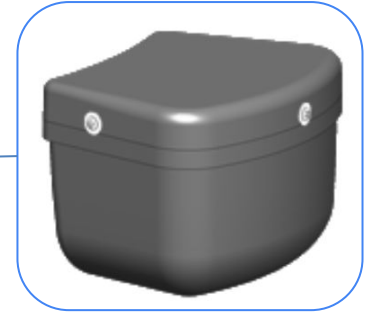

- 4.1 Box F81830  
4.2 XL Box F81886